

## Bosch Solution 2000/3000 Alarm Panel

- ✓ **Panel Dialler wiring**
- ✓ **Panel Dialler programming**



**PERMACONN™**  
leaders in wireless security technology

### **Background:**

The PM45 & PM1048-3G (v3) communicator now has a terminal block for the connection of the female 611 fly lead (supplied). If the Alarm Panel also has a terminal block for PSTN connection, we recommend you use your own cable between the Alarm Panel dialler and PM45 & PM1048-3G (v3).


This type of installation negates the use of the female 611 fly lead, decreasing your installation time.

For four (4), six (6) and eight (8) pin RJ connectors, please refer to manufactures wiring diagram.

There are four minimum requirements from the Alarm panel for successful communication:

- 1) Must have an eight (8) digit primary phone. E.g. 12345678 or 55555555.
- 2) A four (4) digit account number.
- 3) Must be Contact ID format.
- 4) Must be set for tone (DTMF) dialling.
- 5) Optional is open / close reporting, must be enabled for Pocket Secure App.

### **Dialler Lead wiring between Permaconn and Bosch Solution 2000/3000 Alarm Panel:**

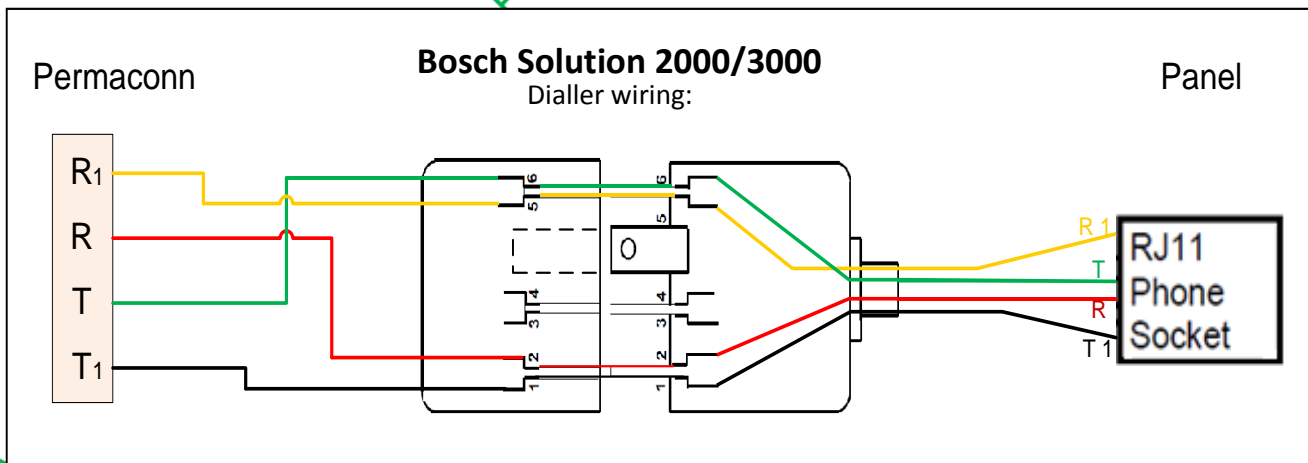

**Press and hold the '9' key to send an immediate test report.**

**Programming the Bosch Solution 2000/3000 Alarm Panel for dialler operation:**

Phone Number 1 - Receiver 1

Loc: 000 to 015: 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 (0 = 10 and telephone termination = 0) (anywhere else 0 = 0)

Handshake Tone – Receiver 1

Loc: 032: **Must be set to 1** (HI-LO handshake (contact ID))

Transmission Format – Receiver 1

Loc: 033: **Must be set to 1** (contact ID)

Account/client ID

Loc: 034-039 (default = 000000) (NB# Right Justified) e.g. 001234

Dialling Format:

Loc 080: **Must be set to 1** (Australia DTMF)

Dialler Options 1:

Loc: 177: **Must be set to 9**: (1-Dialler reporting functions allowed) (8-Bell 103 used for FSK format (Disabled = CCITT V21))

User Codes 1-16: Attributes

The fifth location in each user code is the authority level:

0 Arm/disarm

1 Arm only

**2 Arm/disarm and open/close reports (Pocket Secure App)**

3 Arm only and close reports

4 Arm/disarm and code required to isolate

6 Arm/disarm and open/close reports and code required to isolate

8 Master code and arm/disarm

10 Master code and arm/disarm and open/close reports

12 Master code and arm/disarm and code required to isolate

14 Master code and arm/disarm and code required to isolate and open/close reports

Loc:	Default	Loc	Default
User 1:189	10	User 17: 570	
194	2	575	
199	2	580	
204	2	585	
209	2	590	
214	2	595	
219	2	600	
224	3	605	
229	2	610	
234	2	615	
239	2	620	
244	3	625	
249	2	630	
254	2	635	
259	2	640	
User 16: 264	2	User 32: 645	

**Send Test Report**

Holding down [9] until two beeps sound transmits a Test Report (Contact ID Event Code 602) to test the reporting capabilities of the system without activating the sirens.