

DAS DL250 Alarm Panel

- ✓ **Panel Dialler wiring**
- ✓ **Panel Dialler programming**



PERMACONN™
leaders in wireless security technology

Background:

The PM45 & PM1048-3G (v3) communicator now has a terminal block for the connection of the female 611 fly lead (supplied). If the Alarm Panel also has a terminal block for PSTN connection, we recommend you use your own cable between the Alarm Panel dialler and PM45 & PM1048-3G (v3).


This type of installation negates the use of the female 611 fly lead, decreasing your installation time.

For four (4), six (6) and eight (8) pin RJ connectors, please refer to manufactures wiring diagram.

There are four minimum requirements from the Alarm panel for successful communication:

- 1) Must have an eight (8) digit primary phone. E.g. 12345678 or 55555555.
- 2) A four (4) digit account number.
- 3) Must be Contact ID format.
- 4) Must be set for tone (DTMF) dialling.
- 5) Optional is open / close reporting, must be enabled for Pocket Secure App.

Dialler Lead wiring between Permaconn and DAS DL250 Alarm Panel:

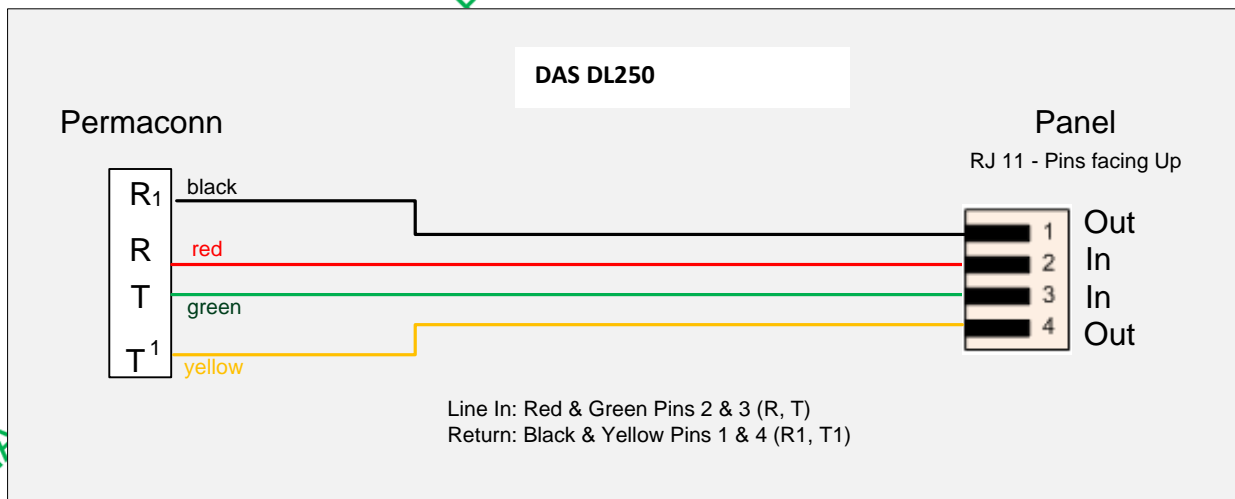

Programming the DAS DL250 Alarm Panel for dialler operation:

Description	Location	Notes
Message format Phone 1	Location 118	0 = Dialler Disable (Default) 1 = Contact ID
Account 1	Location 113-117 0 = A (Enter 10 for a 0) 0 ends the number	E.g. 2090 2*# 10*# 9*# 10*# 0*#
Account 2	Location 135-139 0 = A (Enter 10 for a 0) 0 ends the number	E.g. 2090 2*# 10*# 9*# 10*# 0*#
Account 3	Location 141-145 0 = A (Enter 10 for a 0) 0 ends the number	E.g. 2090 2*# 10*# 9*# 10*# 0*#
Phone number 1	Location 097-112 0 = A (Enter 10 for a 0) 15 = DTMF 0 ends the number	E.g. Phone Number Entry DTMF-1-2-3-4-5-6-7-8-0 15*# 1*# 2*# 3*# 4*# 5*# 6*# 7*# 8 *# 0*#
Zone Alarm limit	Location 134 0 = Unlimited 1 = 1 Alarm per zone	Enter 0
(Pocket Secure App)		
Opening/Closing Reports	Location 342	5 = Phone1 & log only (Default) Reports as user 14
Telephone Line Monitor	Location 149	0 = Disabled