

Paradox EVO 192 Alarm Panel

- ✓ **Panel Dialler wiring**
- ✓ **Panel Dialler programming**



PERMACONN™
leaders in wireless security technology

Background:


The PM45 & PM1048-3G (v3) communicator now has a terminal block for the connection of the female 611 fly lead (supplied). If the Alarm Panel also has a terminal block for PSTN connection, we recommend you use your own cable between the Alarm Panel dialler and PM45 & PM1048-3G (v3).

This type of installation negates the use of the female 611 fly lead, decreasing your installation time. For four (4), six (6) and eight (8) pin RJ connectors, please refer to manufactures wiring diagram.

There are four minimum requirements from the Alarm panel for successful communication:

- 1) Must have an eight (8) digit primary phone. E.g. 12345678 or 55555555.
- 2) A four (4) digit account number.
- 3) Must be Contact ID format.
- 4) Must be set for tone (DTMF) dialling.
- 5) Optional is open / close reporting, must be enabled for Pocket Secure App.

Dialler Lead wiring between Permaconn and Paradox EVO 192 Alarm Panel:

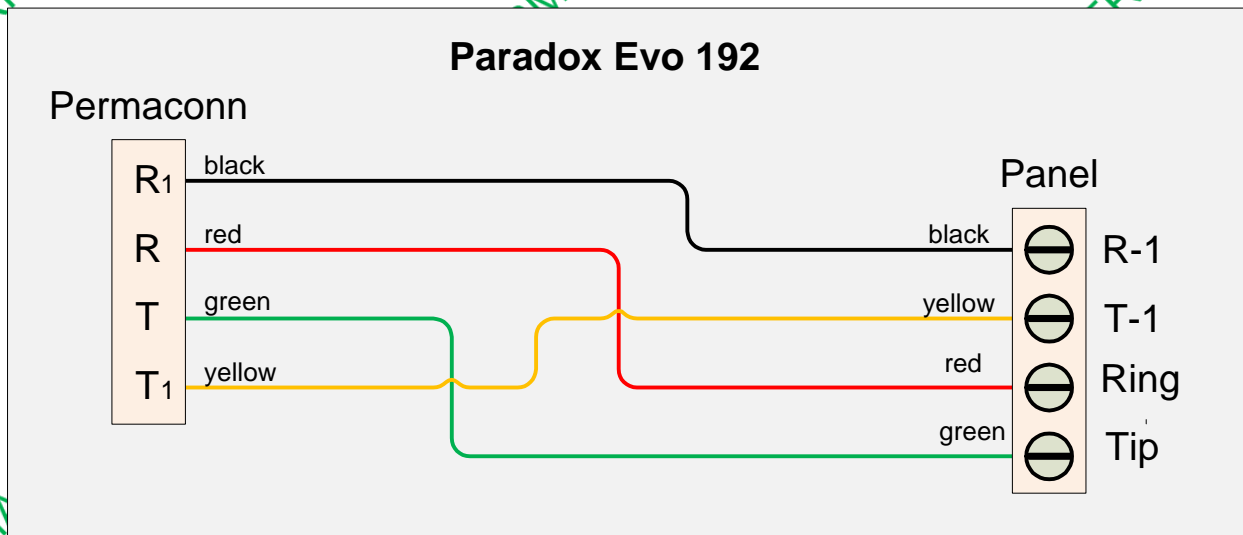

Keyswitch reporting: Must be enabled for Pocket Secure App

Section 0701 – 0702: Keyswitch Arming report code.(default is FF).

Section 0801 – 0802: Keyswitch Disarming report code.(default is FF)

Dialler Enable/Disable: Section 3036 Option 3

CS Phone 1: Section 3071: Any 8 digits e.g. 12345678

Reporting Format: Section 3070: Enter 5.

Tone/DTMF: section 3036: Option 4 Must be ON.

Partition 1 – 8 Account Numbers

Partition	Section	Partition	Section
Account 1	3061	Account 5	3065
Account 2	3062	Account 6	3066
Account 3	3063	Account 7	3067
Account 4	3064	Account 8	3068

NB: When entering the account number a '0' is entered as an 'A'. E.g. 0123 is A123